
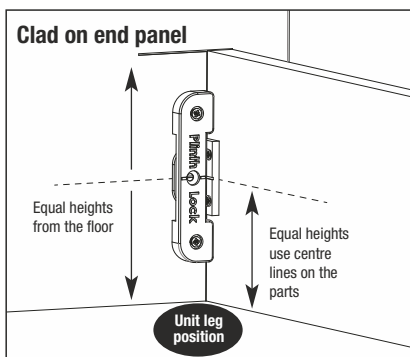


# Pro-fit PlinthLock


## A Unique Concealed Plinth Locking System

### Quick Setup Guide


- For quick and easy set up use the centre datum lines on both male and female components.
- For use on plinth to end panel joint. Simply trim end panels first, then mark the leg position and the underside of the unit on the end panel. Use the marks to position the female component central to the height of the plinth and fix with screws (provided).
- Trim plinth to length, then using the datum on the fixed end panel measure the height and transfer this height to the plinth.
- Fix male component flush with the plinth end using datum centre line.
- Add plinth clips and push into place.
- Repeat the process on internal corners, for return plinths use Panel Lock.

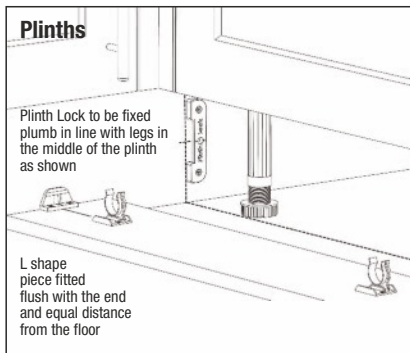

Standard "U" Shape Layout with Return Plinth

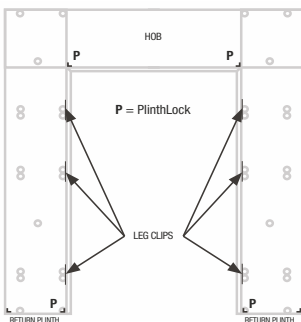

Standard "U" Shape Layout with Full Length End Panel

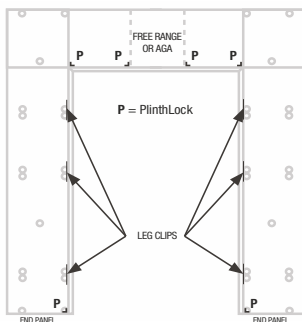

Pro-Fit Innovations Ltd. 63 Station Road, Oakworth, West Yorks BD22 0DZ.  
Telephone +44 (0)1535 647403 Visit [www.pro-fitinnovations.co.uk](http://www.pro-fitinnovations.co.uk)

PlinthLock