
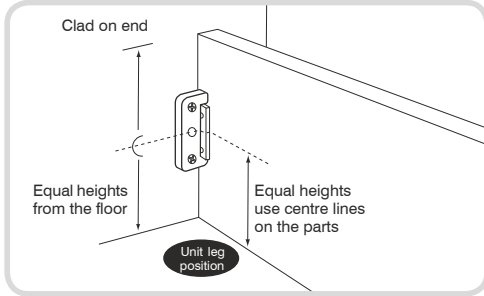



PlinthLock®

Instructions

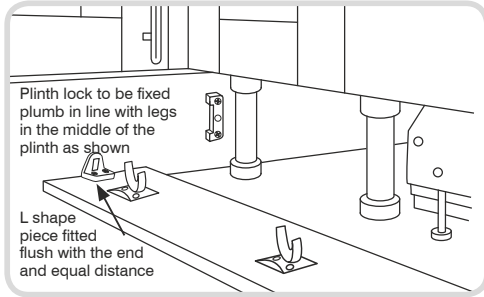


- For quick and easy set up use the centre datum lines on both male and female components.
- For use on plinth to end panel joint. Simply trim end panels first, then mark the leg position and the underside of the unit on the end panel. Use the marks to position the female component central to the height of the plinth and fix with screws (provided).
- Trim plinth to length, then using the datum on the fixed end panel measure the height and transfer this height to the plinth.
- Fix male component flush with the plinth end using datum centre line.
- Add plinth clips and push into place.
- Repeat the process on internal corners. For returns plinths use Panel Lock

Where to install

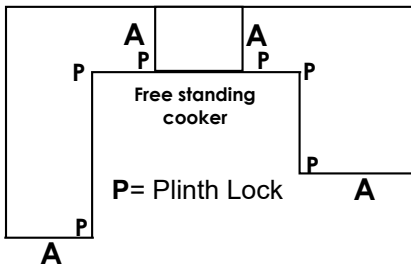

A = Full height end panels

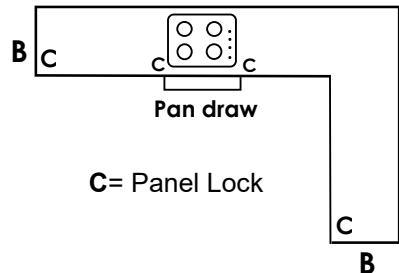

B = Return plinths and pan draws

Pro-Fit
Innovations

Pro-fit Innovations Ltd
Oakvale 63 Station Road Oakworth Keighley
West Yorkshire UK BD22 0DZ
Tel +44 (0)1535 647403
www.pro-fitinnovations.co.uk - sales@pro-fitinnovations.co.uk

Pro-fit Plinth Lock



Patented